



Installation, Care and Handling Guidelines for Impressions Sculptured Panels

The following guidelines are supplied in good faith to help avoid common errors. They are not intended to be a list of step by step instructions; it is assumed that the installer has general construction knowledge. Muraspec bears no responsibility for installation actions taken or not taken, and is not responsible for installer selection.

Inspecting your delivery

Check the delivery agrees with the Purchase Order / Delivery Note.

Freight Damage - Please do not sign for the shipment until you have inspected the entire load for obvious damage. **Refuse the shipment if Damaged.** Contact customer services 08705 117118 immediately.

Concealed Damage - You must contact Muraspec customer services on 08705 117118 within 7 days of delivery.

Do not install Impressions panels of unacceptable quality. If there is any doubt about the quality of the panels contact Muraspec on 08705 117118. *Muraspec will not be responsible for installation or removal costs of unacceptable panels.*

Protective Film – All Gloss colours are supplied with a protective film layer. This should only be removed once cutting and installation are complete. Standard colours (including wood grains) do not have a protective film.

Panels may show signs of slight bowing; this is quite normal. Correct installation using Impression fitting kit 9951 will reduce this distortion.

IF IN DOUBT CONTACT MURASPEC
08705 117 118

Storage and Handling

Store panels on a flat, dry, solid surface

Do not store on edge

Take necessary precautions to protect the face and edges

Do not allow the panels to get wet, or store in damp or excessively hot or cold conditions.

Allow panels to acclimatise for at least 48hrs before installing.

Handle panels with care.

Weights of panels are dependent on design. Standard 1200x2400mm panels have a weight range of 31kg to 42kg per panel.

Avoid bending the panels when moving and carrying.

Take particular care not to damage the face or edges of the panels.

Installation

Planning: Check the walls are dry, structurally sound, flat and free from any protrusions. Ensure all panels are correctly orientated. Panels are labelled on the reverse showing design direction.

It is advisable to lay out the boards to confirm that each panel is correctly orientated / pattern matches before starting to attach Z clips.

Z Clips: Note – Ensure a suitable clearance is left at the top of the panel to allow for Z-clip engagement.


Impression fitting kit 9951. Includes 3 off 1m lengths pre drilled and 9 off 60mm lengths pre drilled. 1 Kit per Impressions Panel is required. (Standard Vertical Orientation)

Attaching to panels: Check thickness of panel and use the appropriate screw length to suit the minimum thickness of MDF board available. Screws are not supplied.

Price Band	Design	Approx Panel Weight 1200mm x 2400mm	Design Depth	MDF depth available for screw fixing
A	Hour Glass	33kg	8mm	10mm
A	Diamond	33kg	8mm	10mm
A	Link	35kg	9mm	9mm
A	Cuscini	42kg	10mm	8mm
B	Ocean	33kg	6mm	12mm
B	Stream	43kg	4mm	14mm
B	Cuba	40kg	9mm	9mm
B	Croc	38kg	6mm	12mm
C	Grid	40kg	5mm	13mm
C	Chisel	31kg	8mm	10mm
C	Coast	38kg	5mm	13mm

Position the 9 off 65mm pieces of Z clip Impression fitting kit 9951 on the back of the standard sized Impressions panel (1200mm x 2400mm) approximately as shown below to ensure the panel weight is evenly distributed. Take care to ensure the screws are fixed into the thicker parts of the board and do not pierce the front surface.

Ensure the clips are installed in level rows.

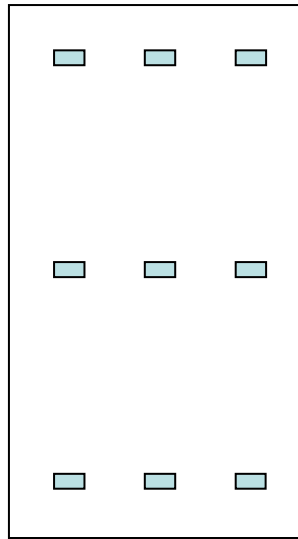

Transfer the dimensions of the Z-clips to the wall.
Mount the 3 off 1m lengths (supplied in Impression fitting kit 9951) using appropriate screws / wall plugs etc to suit wall construction and panel weight. Screws not supplied.

Install Impressions panel by holding against wall and lowering into place to engage clips. Ensure all clips are firmly engaged.



Remove clear protective film (Gloss laminates only)

Care and Handling

For Standard, Leather and Gloss foil laminate options: -

Impressions panels can be cleaned with soap and water (i.e. general washing-up type liquids).

Diluted Ammonia / Alcohol based cleaning agents are also suitable.

Never use abrasive detergents or cleaning materials.

NOTE: always conduct a test on a small inconspicuous area first.

Resistance to Chemical Agent data can be supplied on request.

Fabrication Guide

Impressions panels can be Cut / Drilled etc using general woodworking methods.

Circular saw - 40 tooth carbide tipped blade is recommended.

Table Saw - 50/60 tooth carbide tipped blade is recommended.

Note – Cutting a panel with a foil finish will leave an exposed MDF edge.

Do not use a cut panel in a humid environment.

Conditions of Sale

Goods are supplied subject to Muraspec's standard terms and condition of sale, available on request.